



Disassembling Canon PowerShot SD850 IS Case Removal

Written By: Peter Tran



INTRODUCTION


How to remove the outer casing of your Canon PowerShot SD850 IS.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Case Removal

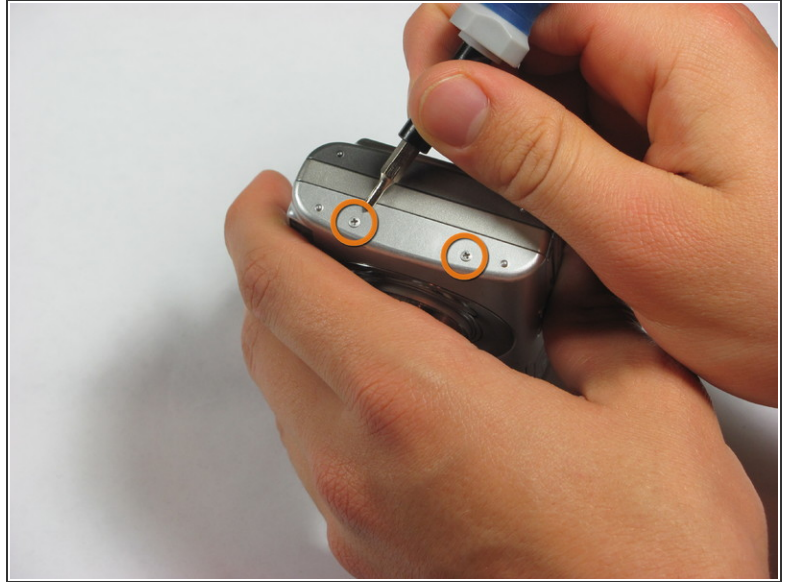


- Remove the following 4 screws:
 - Two 2.8 mm Phillips #00 at the bottom of the camera.
 - Two 2.75 mm Phillips #00 on the opposite side of the wrist strap.

Step 2

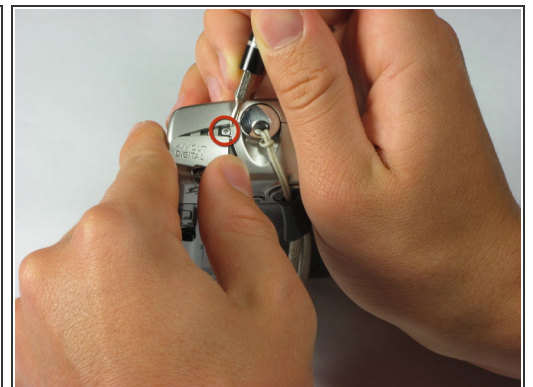


- Open the A/V OUT DIGITAL flap on the side of the wrist strap.
- Remove the 2.75 mm Phillips #00 under the A/V OUT DIGITAL flap on the side of the wrist strap.

Step 3

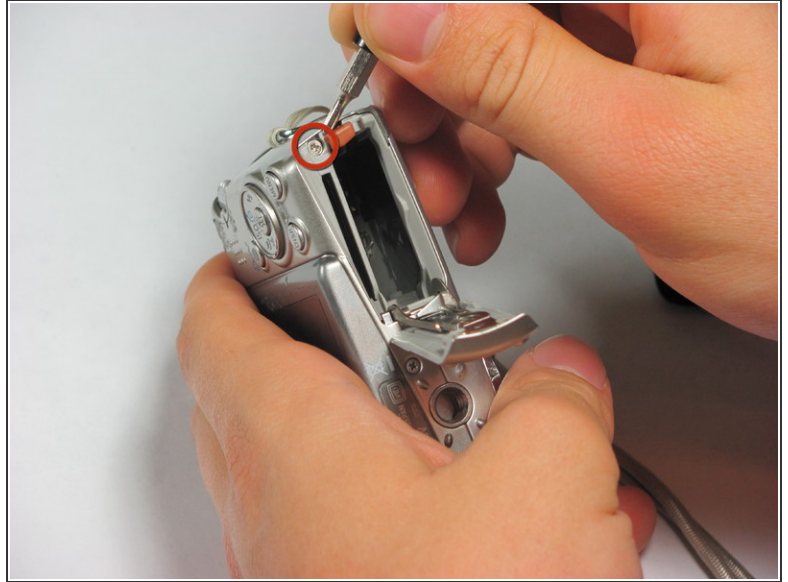


- On the bottom of the camera, use your fingernail to slide the light gray tab towards the edge of the camera.
- Slide light gray door and pull up to open the door.
- Remove the 8.35 mm Phillips #00 next to the brown tab that holds the battery.

Step 4

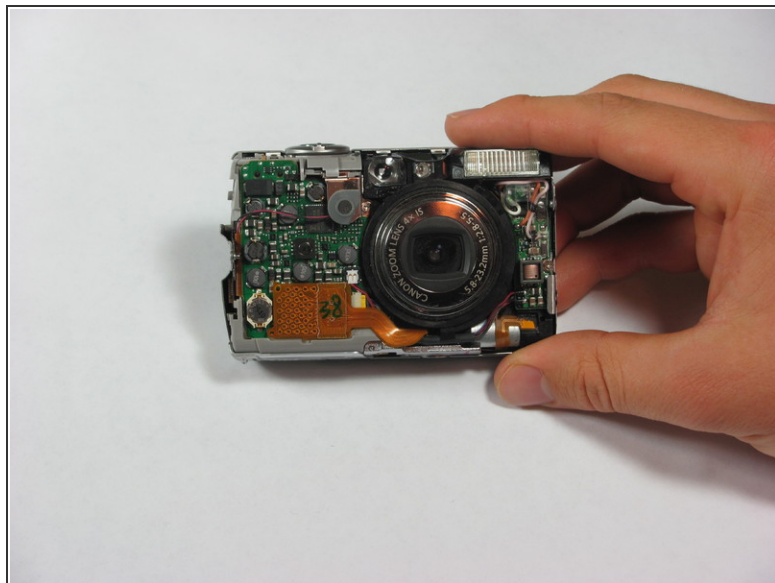


- Gently pull the front cover straight out from the camera. This will expose the wiring on the front of the camera.

Step 5

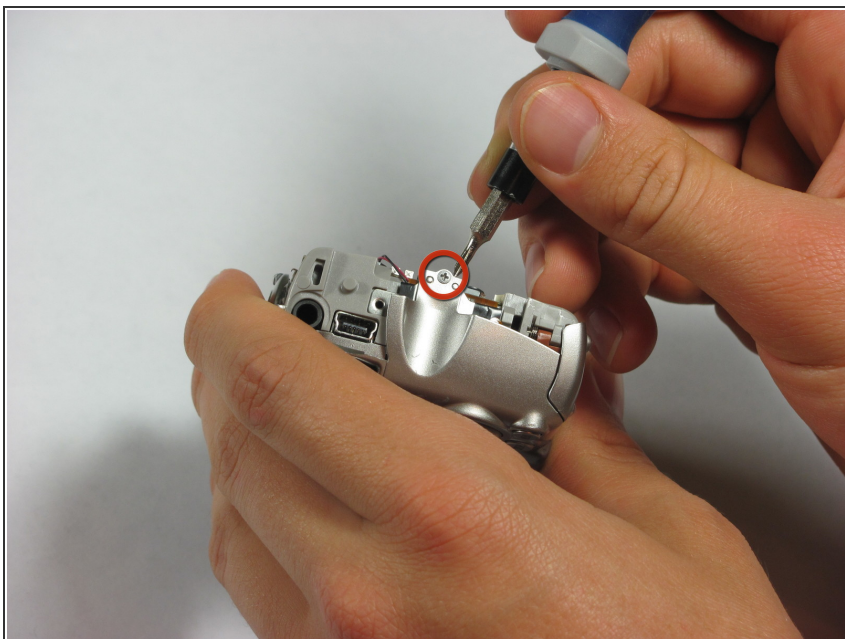

- Remove the 2.75 mm Phillips #00 next to A/V OUT DIGITAL.

Step 6

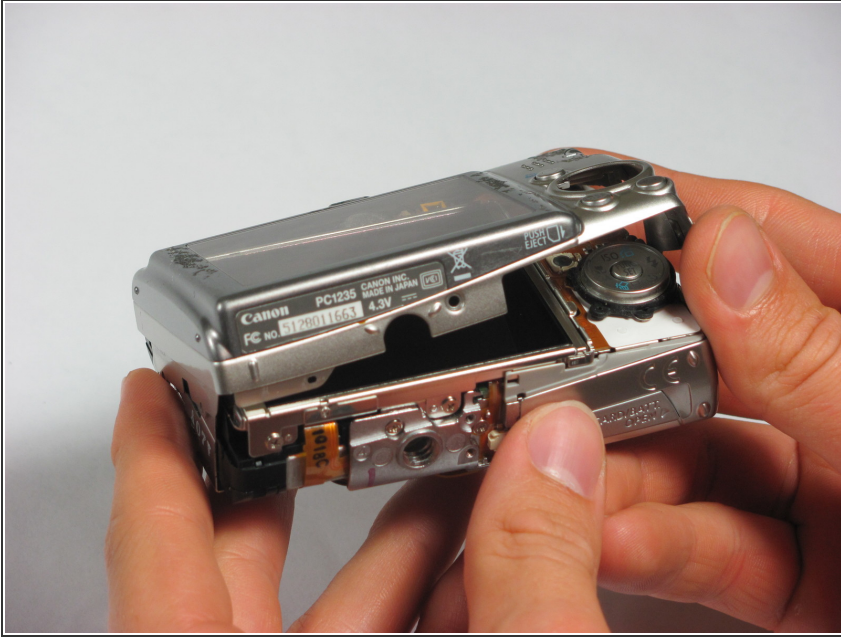

- Slide the back casing (with the screen protector) off to reveal the LCD and back wiring.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 10:26:54 AM.